

SIEMENS

SIREMOBIL Compact

SP

System Manual

Installation Instructions

Retrofit kit, holder for hand release switch

© Siemens AG 2001

The reproduction, transmission or use of this document or its contents is not permitted without express written authority. Offenders will be liable for damages. All rights, including rights created by patent grant or registration of a utility model or design, are reserved.

English

Doc. Gen. Date: 03.01

Print No.: SPR2-130.812.02.01.02

Replaces: n.a.

Safety information

When performing work, adhere to the product-specific safety information as well as the general safety information contained in the ARTD Part 2.
Observe ESD guidelines.

Required documentations

- SIREMOBIL Compact System manual

Required parts

- 1 set Retrofit kit holder 37 79 050
- 2 sets Holder cpl. 37 79 068

Tools

- Tool kit
- 1 set Allen keys

Required measurement

- Protective conductor meter 44 15 899 RV090
 or
- Bender safety meter 97 96 979 Y0526

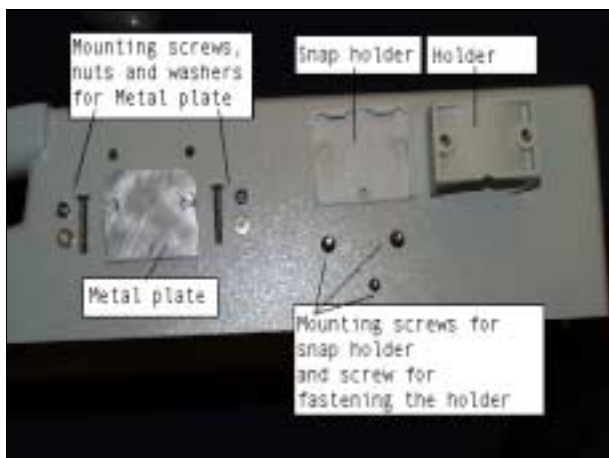


Fig. 1 Overview Mounting materials



Fig. 2



Fig. 3



Fig. 4

NOTICE

We recommend changing both holders on both sides of the operating console against the retrofit kits in order to reduce the working times required for future holder replacements.

- The operating console must be loosened (screws on the bottom side of the operating console and screws on the lifting column below the collar) and lifted up to so that the fastener screws of the holder can be loosened.
- Remove both holders on both sides of the operating console (Fig. 1/ Fig. 2).
- Mount the metal plates with the screws, nuts and washers on both sides of the operating console.
- Mount the snap holder with the screws on the holder (Fig. 3).
- Mount the complete holder on the metal plate (Fig. 4).



Fig. 5

- Fasten the holder with the screw (Fig. 5).
- Remount the operating console on the basic unit and lifting column.
- Reattach the collar.

Final work steps

After completing all service work and reattaching the covers, perform the protective conductor test as specified in ARTD-002.731.17... .

The protective conductor resistance should not exceed 0.2 ohms.

NOTICE

For future replacements, it is no longer necessary to lift up the operating console to reach the mounting screws. Replace only the holder with mounted snap holder (see Fig. 3 to Fig. 5).